STEP 5

MODEL CONFIGURATION & AUTO-CALIBRATION

Once the Treadmill is plugged in, you need to configure the Treadmill and perform auto-calibration for maximum performance.

PREMIER and DELUXE CONSOLE:

DO NOT STAND ON THE BELT WHEN PERFORMING THE AUTO-CALIBRATION

Once the treadmill is plugged in, you will need to configure and run auto-calibration. With the safety key in place, turn the treadmill on. A setup screen should appear on the console. Set your treadmill to the correct model number (9250 or 9450) using the ELEVATION arrow keys and the correct units (MI [miles]/KM [kilometers]) using the SPEED arrow keys. If you are unsure of the model number, you can locate the number on the console masts. Once you have located the model number and units with the arrow keys, press and hold ENTER. Now you can perform auto-calibration by pressing START.

The treadmill will run through minimum and maximum speed and elevation. This will take 3 to 5 minutes. Let the treadmill perform this complete function. "END" will appear when auto-calibration is complete. When auto-calibration is complete, the treadmill will reboot and return to the start-up screen.

SIMPLE CONSOLE:

DO NOT STAND ON THE BELT WHEN PERFORMING THE AUTO-CALIBRATION

Once the treadmill is plugged in, you will need to configure and run auto-calibration. With the safety key in place, turn the treadmill on. A setup screen should appear on the console. The large LED window displays the model number and the small LED window displays the units. Set your treadmill to the correct model number (9250 or 9450) using the ELEVATION arrow keys and the correct units (0 for miles and 1 for kilometers) using the SPEED arrow keys. If you are unsure of the model number, you can locate the number on the console masts. Once you have located the model number and units with the arrow keys, press and hold ENTER. Now you can perform auto-calibration by pressing START.

The treadmill will run through minimum and maximum speed and elevation. This will take 3 to 5 minutes. Let the treadmill perform this complete function. "END" will appear in the window when auto-calibration is complete. When auto-calibration is complete, the treadmill will reboot and return to the start-up screen.

VISION FITNESS®

500 South CP Avenue • P.O. Box 280 • Lake Mills, WI 53551
toll free 800.335.4348 • phone 920.648.4090 • fax 920.648.3373
www.visionfitness.com

©2006 Vision Fitness. All Rights Reserved. 5.06
AG18.31PRD
REV7

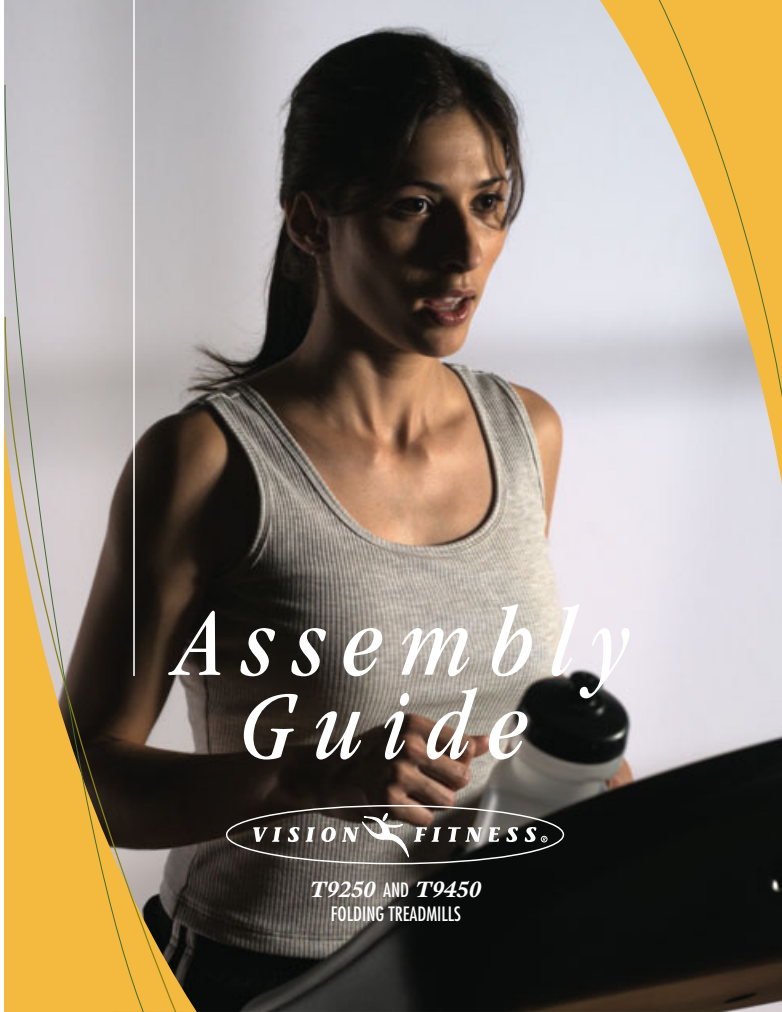

Assembly Guide

VISION FITNESS®

T9250 AND *T9450*
FOLDING TREADMILLS

TOOLS, HARDWARE, & PARTS INCLUDED

8mm Allen Wrench

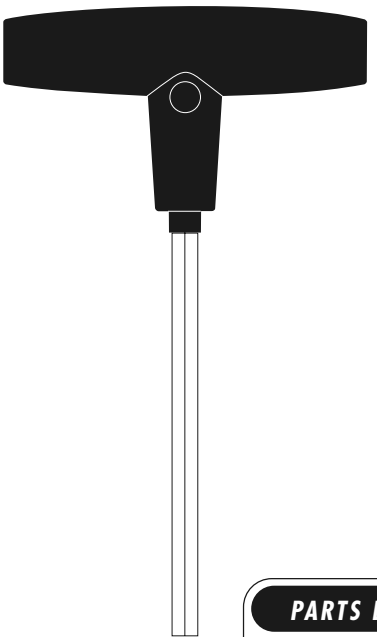

5mm Allen Wrench

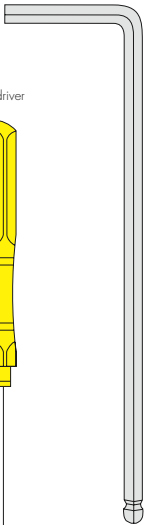

Screwdriver



PARTS BOX

Water Bottle, Qty: 1
Safety Magnet Key, Qty: 1
Color-coded Hardware Bags

HARDWARE INCLUDED

ORANGE BAG



M8 x 20L Bolt
Quantity: 8

BLUE BAG

Flathead Pointed Screw
Quantity: 2



Flathead Bolt
Quantity: 4

PINK BAG

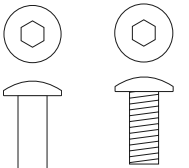

M8 x 20L Bolt
Quantity: 4

M8 x 135L Bolt
Quantity: 4

Assembly Guide

T9250 AND T9450
FOLDING TREADMILLS

To avoid possible damage to this Folding Treadmill, please follow these assembly steps in the correct order. Before proceeding though, find your new Folding Treadmill's 2 serial numbers, located on the front of the main frame and on the bottom of the console, and enter here:

Frame Serial Number _____ Console Serial Number _____

Refer to these numbers when calling for service, and also enter these serial numbers on your Warranty Card and in your own records. Be sure to read your Owner's Guide before using your new Folding Treadmill.
If any parts, hardware or tools are missing, please call 1.800.335.4348, Extension 12

NOTE: It is recommended that you apply grease to the threads of each bolt as you assemble your Folding Treadmill, to prevent loosening and noise. Also, during each assembly step, ensure that ALL nuts and bolts are in place and partially threaded in before completely tightening any ONE bolt.

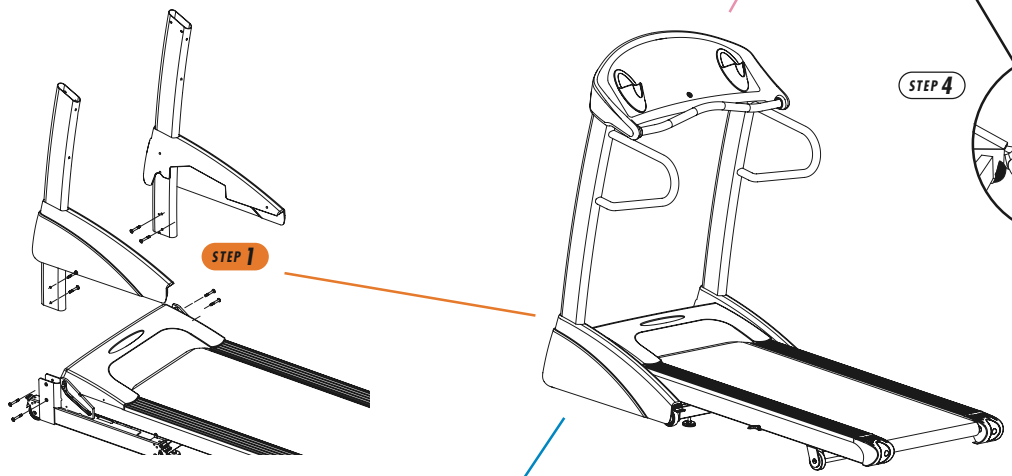

STEP 1 ORANGE BAG

- Slide on the right and left console mast covers from the bottom of the console masts
- Using the wire tie as a guide, slide the data cables (One small and one large) up from the bottom of the right console mast. Make sure the data cables run through the slot located at the front of the right console mast.
- Put the console mast into the console mast bracket. Be sure not to pinch the data cables
- Secure the console mast to the bracket with 4 bolts (M8x20L); 2 bolts on each side. Tighten with the enclosed 5mm Allen wrench
- Repeat on the left side

NOTE: There are no data cables on the left side.

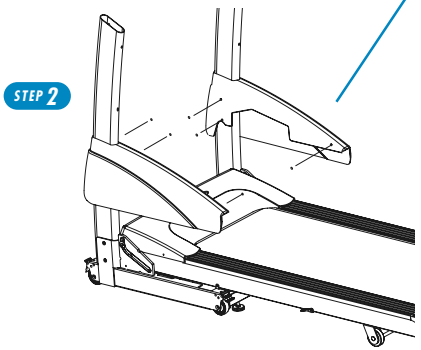

STEP 2 BLUE BAG

- Slide the left and right console mast covers over the console mast brackets.
- Fold the treadmill
- Attach the right side cover using the Flathead pointed screw for the rear of the cover and the Flathead bolts for the front of the cover.
- Repeat this step on the left side.
- Unfold the treadmill

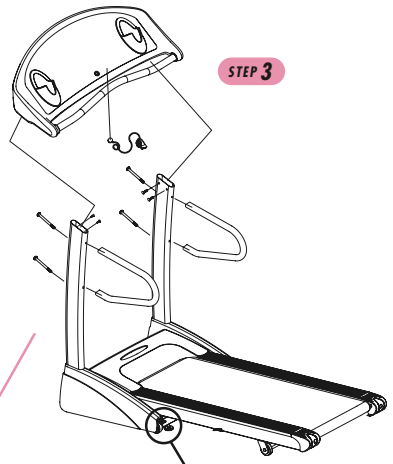

STEP 3 PINK BAG

- Plug the large data cable into the large connector on the console. Plug the small data cable into the small connector on the console.
- Push the extra data cable into the console mast. Be sure not to pinch the data cables.
- Mount the console to the console masts. Attach the console using four bolts (M8x20L) and tighten using the enclosed 5mm Allen wrench.
- Attach one handlebar to the right console mast using two bolts (M8x135L).
- Repeat on the left side

STEP 4 LOCK WHEELS

Once your treadmill has been positioned for use, you should lock the four transport wheels located on the lower folding frame. With your foot, simply press down on the bottom latch, labeled ON, of all four transport wheels.

STEP 5 AUTO-CALIBRATION

Please refer to back cover for this procedure, then return to Step 6.

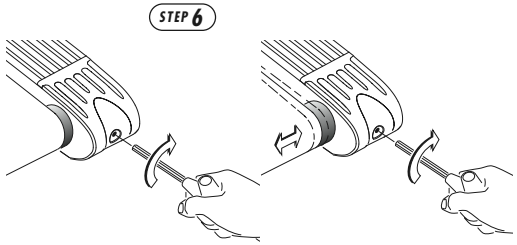

STEP 6 BELT TENSION

- If the running belt slips when used, use the supplied 8mm Allen wrench to turn the left and right tension bolts clockwise ¼-turn at a time until the belt no longer slips.
- Run the treadmill at 2.0 mph. If the running belt is too far to the *right* side, use the supplied 8mm Allen wrench to turn the *right* tension bolt *clockwise* ¼-turn at a time until the belt remains centered during use.If the running belt is too far to the *left* side, turn the *left* tension bolt clockwise ¼-turn at a time until the belt remains centered during use.